Bang&Olufsen

Type 4560
B/G PAL/SECAM EAST modified
220V

Type 4561
B/G PAL/SECAM EAST modified

Beocord VX 5500

Type 4563
B/G PAL/SECAM EAST modified
VPS
220V

Type 4566
B/G PAL/SECAM EAST modified
NICAM
240V

Type 4567
B/G PAL/SECAM EAST modified
240V

Type 4568
I PAL NICAM
200V

Type 4569
I PAL NICAM
240V

Type 4535
PAL/SECAM L/B/G EAST modified
220V

Beocord VX 5500

SERVICE MANUAL

To paste into SERVICE MANUAL – BEOCORD VX 5000 (3538736-3538737-3538738)
or SERVICE MANUAL BEOCORD VX 4000 (3538745)

3538789

-91

12-3
10-3

Bang&Olufsen

DIAGRAM J HI FI AUDIO

(Type 456X)

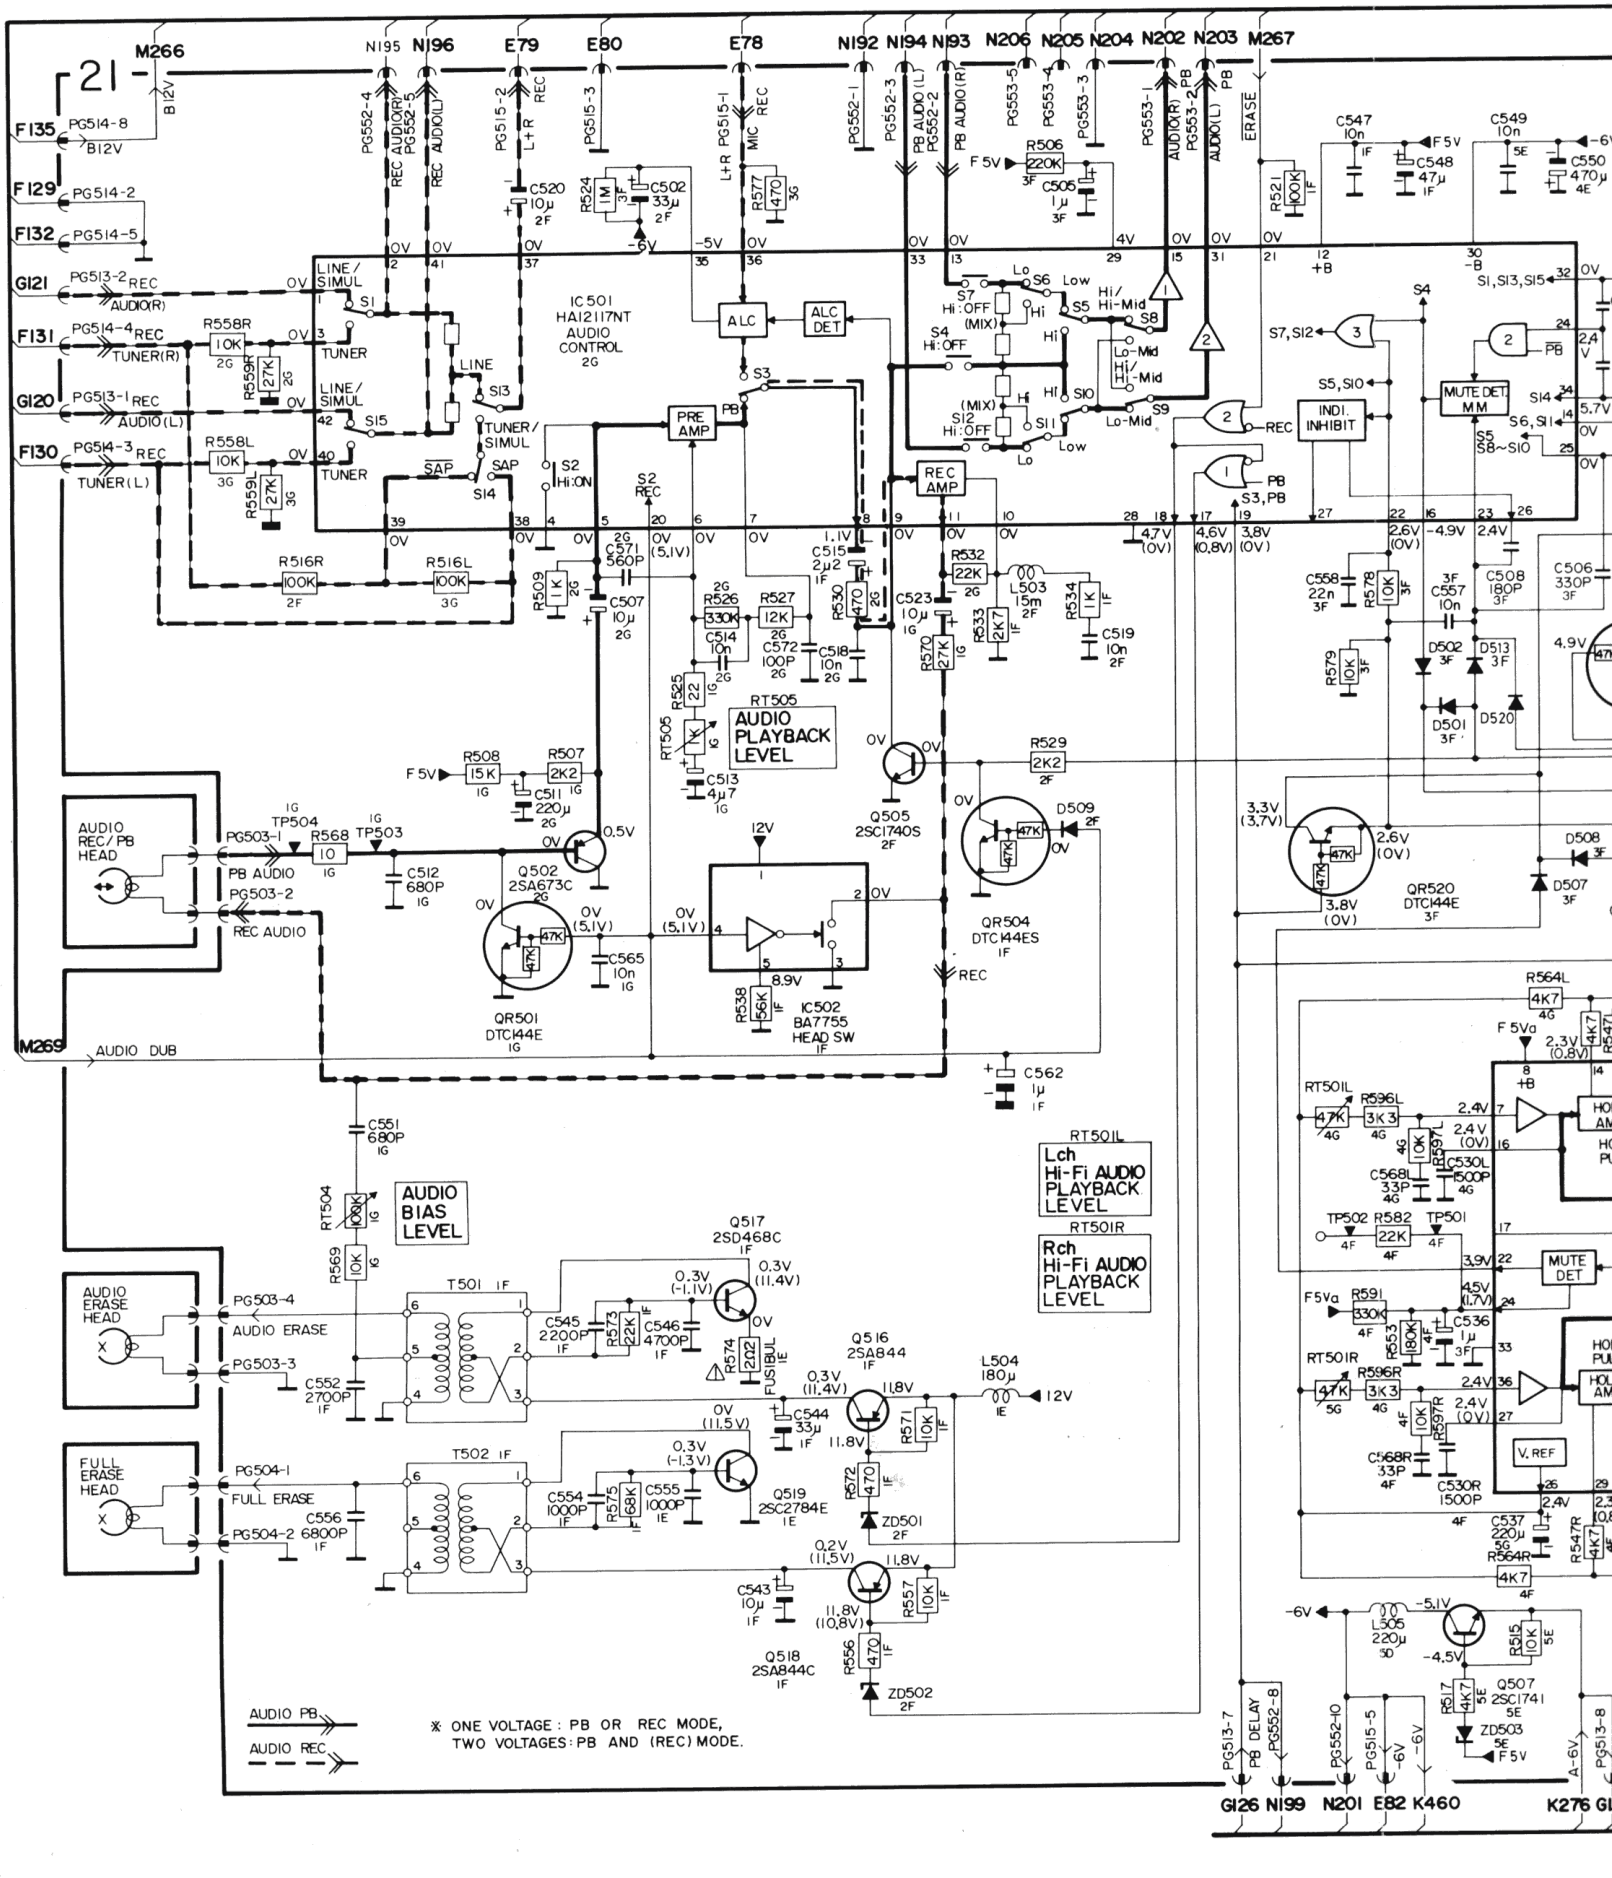

12-3
10-3
12-3
10-3

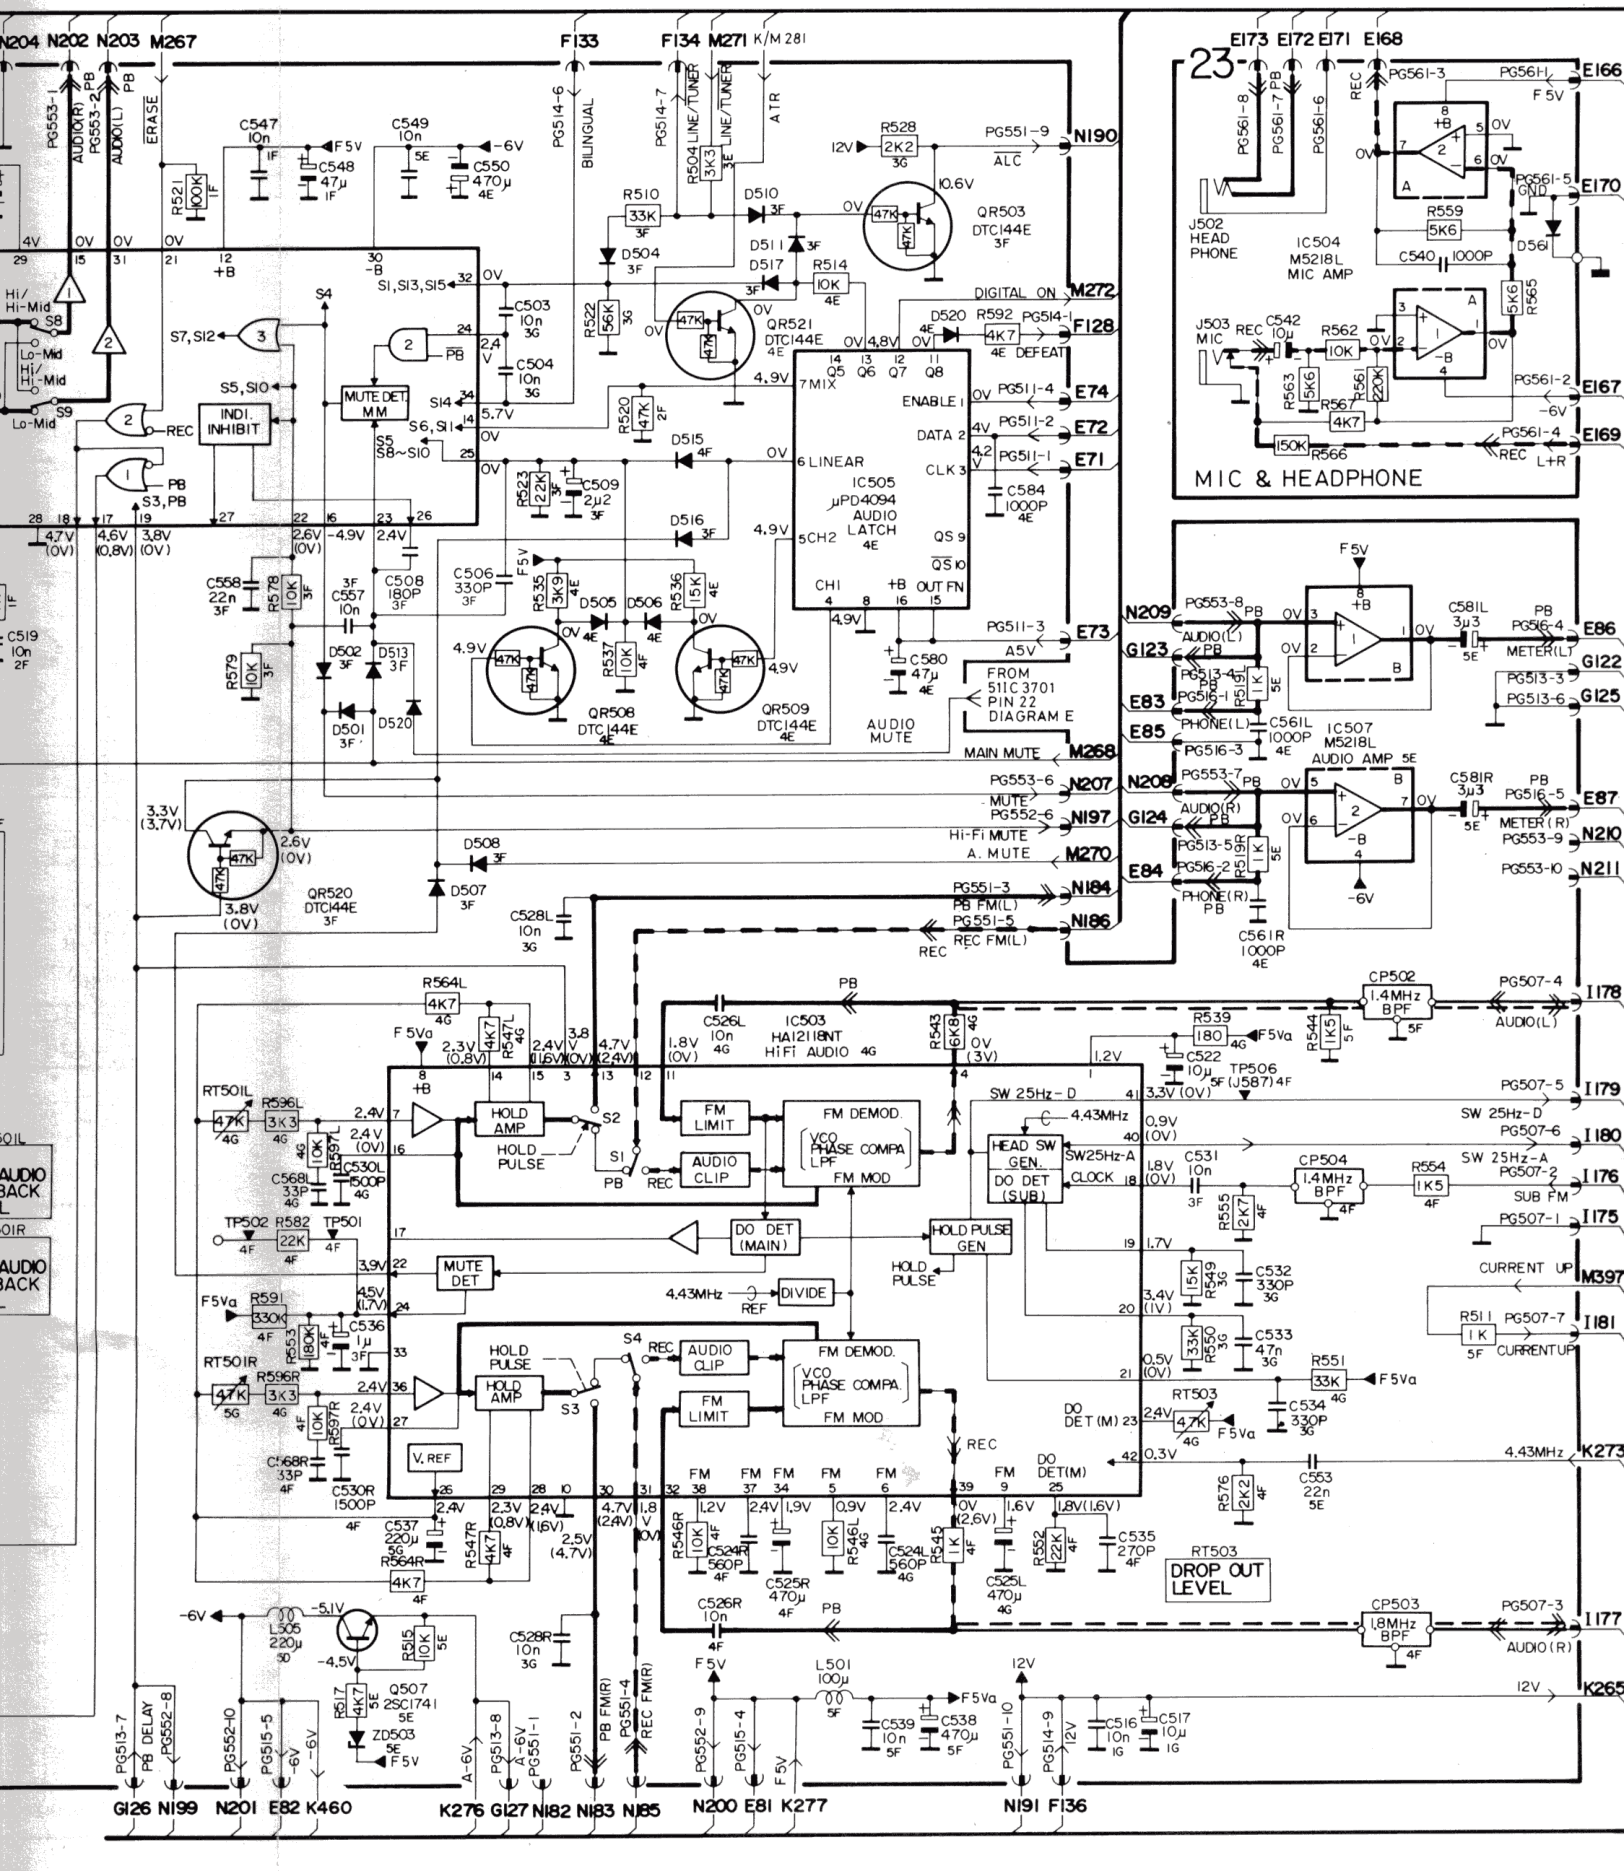

12-4
10-4

Bang & Olufsen

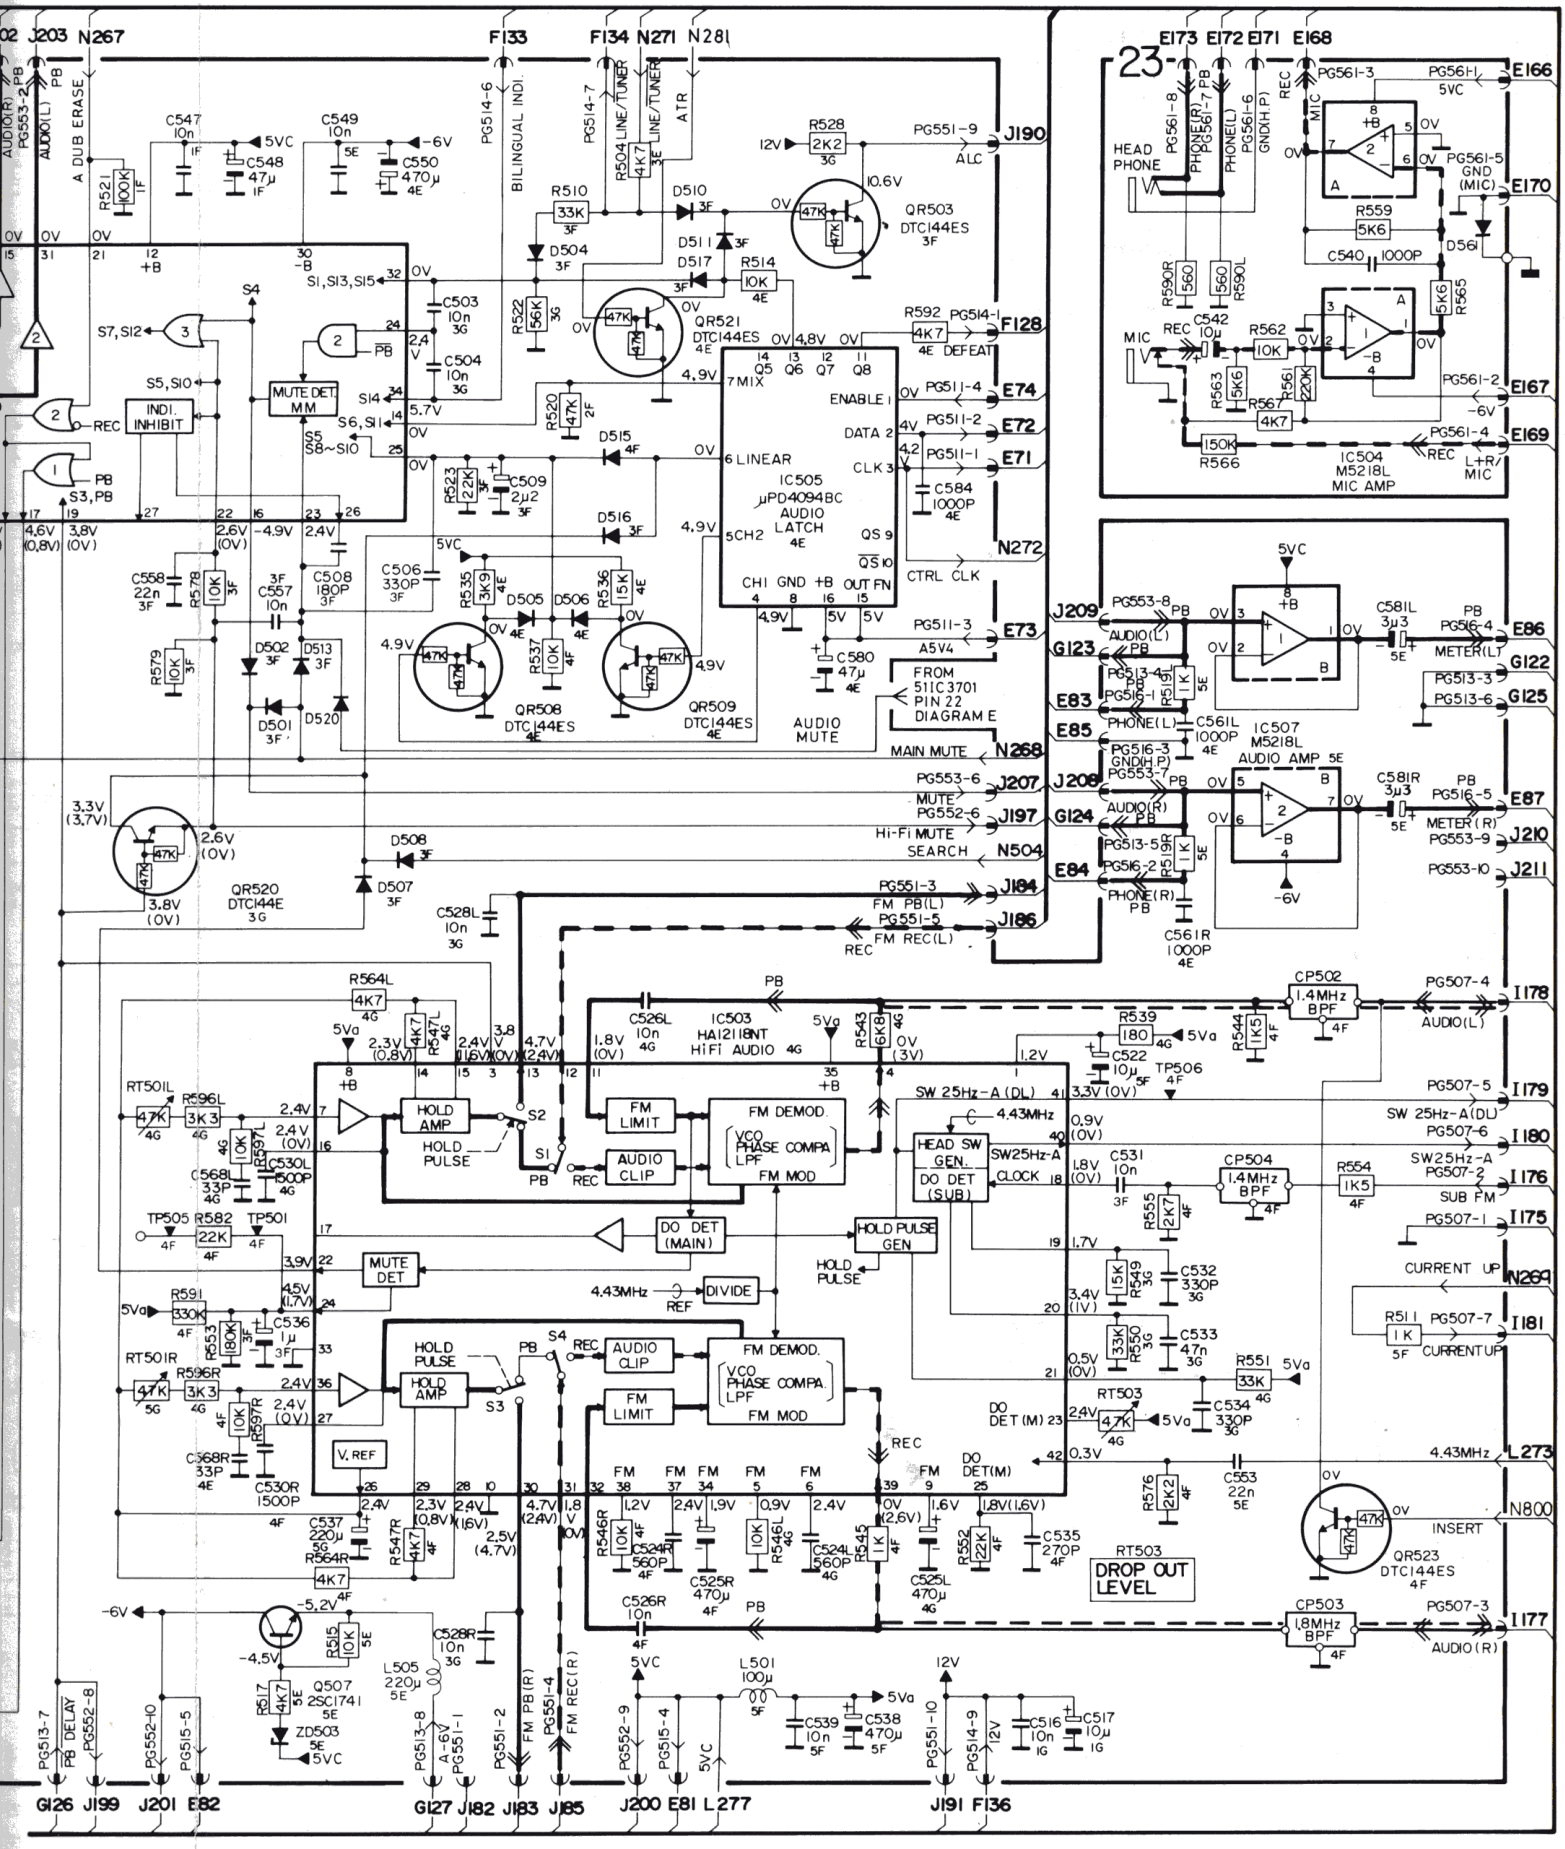

12-4
10-4
12-4
10-4

DIAGRAM K HI FI AUDIO

(Type 4535)